

## How to change TSP654II Bluetooth auto connection.

-First see the printer configuration , by holding down the feed button then power the printer on.

At the second receipt printed(take a few second to be printed) , Auto connection section , Current setting : on / off

Here is the instruction for changing the printer Bluetooth auto connection.

### 4.4. How to change the Auto Connection Setting by operating a printer.

Use the following procedure to change the Auto Connection setting.

1. After setting a paper, turn the printer power on to make it enter the idle state.
2. Hold down the interface RST switch for more than five seconds.
3. Check that the LED on the printer is flashing, and then release the RST switch.
4. When the LED stops flashing, wait until the following completion notification is printed.
5. After turning the power back on, perform self-printing, and then check the setup.

Information printed:Auto Connection(Current Setting)

Print example:

```
< Current Setting >  
Auto Connection : ON  
  
To enable this setting, turn  
Printer Power OFF and turn ON.
```